

LED Blinder light



Please read this manual before use

1. Features

◆ Descriptions

- Voltage: 110v-240v
- Power: 400W
- Channels: 8CH/4CH
- Lamp: 4x100W warm white COB LED
- Function: DMX 512, AUTO, Sound active, master/slave

◆ LED display



A B C D

- A. Menu
- B. up
- C. down
- D. Enter
- E. LED display

◆ Instructions

Press the function key A will cycle out of eight different function effects, The two numbers before the digital tube represent the current function (see the menu). The last two numbers represent the function which is the address code or speed parameters. Press B or C, you could modify the parameter. Press D is confirm.

2. Led Display Chart (All functions selected by pressing the D key to confirm)

NO.	Display	Function
1	A001	8 Channels address code, (001-512) B, C plus or minus key address code value
2	D001	B, C plus or minus key address code value
3	H001	Two-channels address code, (001-512) B, C plus or minus key address code value
4	h001	one channel address code (001-512) B, C plus or minus key address code value
5	CC00	Running pattern, (00-06) B, C key to modify the running pattern

6	LL00	Running speed, (01-99) B, C keys to change the transition speed
7	CP 00	Gradient, (01-99) B, C key to modify the pulse change, gradual speed
8	dE 00	Pulse change, (01-99) B, C key combination to modify the rate of change
9	bEb1	Voice change
10	W255	White color selection, (000-255) B, C key to modify the color selection
11	n000	Strobe, (000-255) B, C key variable speed strobe repair

3. DMX 512 The instruction of 8 channels

CHANNEL	FUNCT ION	INSTRUCTION
Channel 1	Dimmer	W1, W2, W3, W4 total dimming, linear dimming from dark to bright
Channel 2	W1 Dimmer	W1 Dimming, linear dimming from dark to bright
Channel 3	W2 Dimmer	W2 Dimming, linear dimming from dark to bright
Channel 4	W3 Dimmer	W3 Dimming, linear dimming from dark to bright
Channel 5	W4 Dimmer	W4 Dimming, linear dimming from dark to bright
Channel 6	Strobe	W1、W2、W3、W4 Strobe , slow--fast

Channel 7	Function select	0-20 empty 21-35: Jump to run 1; 121—135: Jump to run 6; 136—150: Jump to run 1; 226—240: Jump to run 6; 241—255: Sound activate;
Channel 8	Speed	Speed slow-fast

4. DMX512 CHANNEL 4

CHANNEL	FUNCT ION	INSTRUCTION
Channel 1	W1 Dimmer	W1 Dimming, linear dimming from dark to bright
Channel 2	W2 Dimmer	W2 Dimming, linear dimming from dark to bright
Channel 3	W3 Dimmer	W3 Dimming, linear dimming from dark to bright
Channel 4	W4 Dimmer	W4 Dimming, linear dimming from dark to bright

5. DMX512 CHANNEL 2

CHANNEL	FUNCT ION	INSTRUCTION
Channel 1	Dimmer	W1、W2、W3、W4 Dimming, linear dimming from dark to bright
Channel 2	Strobe	W1、W2、W3、W4 Strobe , slow--fast

6. DMX512 CHANNEL 1

CHANN EL	FUNCTI ON	INSTRUCTION
Channel 1	Dimmer	W1 、 W2 、 W3 、 W4 Dimming, linear dimming from dark to bright

7. Advantages

Operation is very simple, user-friendly design, flicker-free dimming, jitter and so on. Can be adapted to film, photograph, television and other demanding occasion for lighting.