

# LED PAR CAN

## User' s manual



Before use please read this manual

# 1. Features:

Voltage:AC 110-260V, 50/60Hz

Power:130W

Lamp:6pcs \*7in1 LED and 64pcs\*0.2W RGB LED

Packing Size: 21×21×15cm

Net Weight:4.5Kg; Gross weight:5kg

Colorful color ; automatic / online synchronization

Strobe mode; multi-channel mode DMX512 Console

# 2. Safety precautions:

- To ensure that the local voltage and the required voltage for product is consistent.
- If a product's power cord is damaged, please do not try to use the product. Do not try to unplug the power cord from the ground plug. Plug is used to reduce short-circuit electric shocks and fire prevention.
- Before making any connections disconnect the main power supply.
- In any case, please do not remove the lid, which is not part of the user can use.  
If the product of the shell is missing, please do not run product.
- Do not stuff the products to the dimmer package.Guarantee that the product in the ventilate place ,and maintained between the product and the wall 6 feet (15 cm) distance.
- If damaged, please do not run product.
- If the long-term non-use products, please disconnect the power.
- Make sure the product located in a safe and stable place.
- Special attention to the power cord from being pinched or out of product.
- Cleaning :

In accordance with the manufacturer's recommendation to clean products' fixed position. Please read the "cleaning" in detail.

### 3. Heat output

Devices should be away from heat sources such as radiator, heater, warm furnace or other devices generate heat.

In the following circumstances, the fixed installations are required to qualified service personnel overhaul:

- A. When the power cord or plug is damaged.
- B. The product fall or when the liquid outflow the device.
- C. When the device does not work correctly, or have some change in the exhibition.

### 4. Installation of power:

At the time of switching in power, make sure that the voltage in your area is consistent with the the led spot light's voltage. This for AC110-240V. Since different parts of the voltage is different, so products in operation, make sure your wall outlet voltage consistent with the product.

### 5. DMX combination:

In order to ensure a fixed DMX data transmission, when using several DMX device to the fullest extent possible use the shortest cables. Fixtures connected to the DMX channel order does not affect the choice of DMX. For example:when the allocation of fixed installations DMX 1 channel, DMX will be located in any location, in the front, back or middle of anywhere. When the fixed installations assigned to DMX 1 channel, whether it is located in which of the DMX channels, DMX controller is aware that the data sent on the channel

one.

## 6. Usage mode:

You can use the following four ways:


Automatic ---- This section will automatically operate through a variety of colors .

RGBWY Mode ---- select a color or a different color in order to maintain the same state.

DMX control mode --- This function will be under the standard of DMX512 controller, let you control each device separately.

## 7.LED display:

The digital display like below:

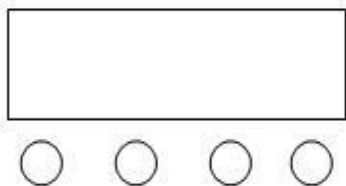

A: Menu  
B: Up  
C:DOWN  
D:Enter

A B C D

No	LED display	function
1	A001	DMX address(13CH)

2	D001	DMX address(8CH)
3	R000-R255	Red
4	G000-G255	Green
5	B000-B255	Blue
5	W000-w255	White
7	Y000-Y255	Amber
8	U000-U255	Purple
9	L000-L255	Lime
9	FH0-FH99	strobe
10	Cc01-C099	Color choose
11	F000-F010	Show mode
12	S000-S100	Sound sensor

## CHANNEL TABLE

Mode 1 (8)	Channel	Mode 2 (12)	Channel
1	red	1	Dimmer
2	green	2	Red
3	blue	3	Green
4	white	4	Blue
5	yellow	5	White
6	UV	6	Yellow
7	Lime	7	UV

<p>8</p>	<p>000-005:close  006-013:Red (phase1)  014-021:Green (phase1)  022-029:Blue (Phase1)  030-037:Red (phase2)  038-045:Green (phase2)  046-053:Blue (Phase2)  054-061Red (phase3)  062-069:Green (phase3)  070-077:Blue (phase3)  078-08:Red (phase4)  086-093:Green (phase4)  094-101:Blue(phase4)  102-10: opposite phases red  110-117:opposite phases  green  118-125:opposite phases  Blue  26-133:the other opposite  phases red  134-141:the other opposite  phases Green  142-149:the other opposite  phases Blue  150-157:red(phase1+phase2)  158-165:Green(phase1+phase2  )  166-173:Blue(phase1+phase2)  174-181:red(phase1+phase2+p  hase3)  182-189:Green(phase1+phase2  +phase3)  190-197:Blue(phase1+phase2+  phase3  198-205:all ring red  206-213:all ring green  214-221:all ring blue</p>	<p>8</p>	<p>Lime</p>
----------	--	----------	-------------

	222-229:all ring red and green 230-237:all ring red and blue 238-245:all ring green and blue 246-253:all ring RGB		
		9	Strobe
		10	Ring:000-005 NULL 006-050 color 051-100 jump change 101-255:auto run
		11	Speed of CH9
		12 macro	000-010 NULL 011-049 color 050-099: jump change 100-149 change1 150-199:change2 200-249:change3 250-255 sound=activate
		13	Speed of CH11

## 8. Cleaning

As the smoke and dust corrosion, internal and external vision lens must be cleaned out to make the light output power optimization.

1. Use the glass cleaner and soft cloth to clen the package.
2. Every 20 days, use the glass cleaner and soft cloth to clean the external lens.

3. When you insert the power is always to ensure that every part of the product dry.

When Fixtures run, require regular cleaning according to the different environments.

## 9.Troubleshooting

The following are some common problems encountered and the solutions when the customers use it:

- For there is no response to DMX
- Check the DMX cable is properly connected (pin3 as follows: "hot", in other DMX devices, pin2 are also as follows: "hot" means.
- For the voice made no reply

Sound is too small or too high-profile voice can not make it up and running. If this problem persists, please contact your vendor for help.

## 10.Remove the goods:

Thank you for your purchase our products. Each one of this items has been thoroughly tested, and in the best working condition in the shipment on board. Carefully check the carton during shipment of damage occurring. Occurs if the carton is damaged, carefully check the location of damage and to ensure that all the necessary accessories are intact functioning. If the damage has been



caused, or some parts has been lost, please contact the manufacturer or vendor for further instructions. Please do not contact in the absence of circumstances, to return the goods to the seller.

## 11. Description:

This item is a model of the control of several kinds of audience spot light. This light widely used in mobile DJ and clubs. This aspect can be used alone or as part of a voice-activated to run through several kinds of mode control.

## 12. Note:

There is no users can use the part. Please do not try to repair itself, otherwise it will make the product warranty expired. For more information, please contact your manufacturer or seller. If possible, please recycle shipping carton.